

## **SHOWLAYERUSAGE system variable**

1815 GstarCAD MY /KW July 26, 2021 [System Variables](#) 0 794

### **Function Description:**

The **SHOWLAYERUSAGE** system variable is used to display icons to indicate whether the layer is in use in layer property manager.

**Type** : Integer

**Saved in** : Registry

**Initial value** : 0

**Range** : 0,1

### **System Variable Value:**

**0** : disable it to improve performance in layer property manager

**1** : enable it to display the icon indicating whether the layer is in use

Online URL:

<https://www.gstarcad.com.my/knowledge/article/showlayerusage-system-variable-1815.html>