

SHOWMOTIONPIN system variable

1816 GstarCAD MY /KW July 26, 2021 [System Variables](#) 0 814

Function Description:

The **SHOWMOTIONPIN** system variable is used to control the default status of thumbnail images.

Type : Integer

Saved in : Registry

Initial value : 1

Range : 0,1

System Variable Value:

0 : display thumbnail snapshot in an unpinned state

1 : display thumbnail snapshot in pinned state

Online URL:

<https://www.gstarcad.com.my/knowledge/article/showmotionpin-system-variable-1816.html>