

SHPNAME system variable

1817 GstarCAD MY /KW July 26, 2021 [System Variables](#) 0 910

Function Description:

The **SHPNAME** system variable is used to set the default shape name which must conform to symbol-naming conventions.

Type : Strings

Saved in : Not saved

Initial value : ""

If no specified value, returns "". Enter a period "." to specify no default value.

Online URL: <https://www.gstarcad.com.my/knowledge/article/shpname-system-variable-1817.html>