

SKYSTATUS system variable

1820 GstarCAD MY /KW July 26, 2021 [System Variables](#) 0 761

Function Description:

The **SKYSTATUS** system variable is used to determine whether the sky illumination is computed when rendering.

Type : Integer

Saved in : Drawing

Initial value : 0

Range : 0,1,2

This system variable has no effect on viewport illumination or viewport background. It only makes sky available when collecting light source for rendering.

System Variable Value:

0 : turn off sky illumination

1 : sky background

2 : sky background and illumination

Online URL: <https://www.gstarcad.com.my/knowledge/article/skystatus-system-variable-1820.html>