

## **SKYSTATUS system variable**

1820 GstarCAD MY /KW July 26, 2021 [System Variables](#) 0 762

### **Function Description:**

The **SKYSTATUS** system variable is used to determine whether the sky illumination is computed when rendering.

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 0

**Range** : 0,1,2

This system variable has no effect on viewport illumination or viewport background. It only makes sky available when collecting light source for rendering.

### **System Variable Value:**

**0** : turn off sky illumination

**1** : sky background

**2** : sky background and illumination

Online URL: <https://www.gstarcad.com.my/knowledge/article/skystatus-system-variable-1820.html>