

## **SMOOTHMESHMAXLEV system variable**

1824 GstarCAD MY /KW July 26, 2021 [System Variables](#) 0 819

### **Function Description:**

The **SMOOTHMESHMAXLEV** system variable is used to set the maximum level of smoothness of mesh objects.

**Type** : Integer

**Saved in** : User-settings

**Initial value** : 4

**Range** : 1 ~ 255 1 ~ 5(recommended)

The extremely high density meshes might affect program performance, so they will be forbidden to create by this system variable.

Online URL:

<https://www.gstarcad.com.my/knowledge/article/smoothmeshmaxlev-system-variable-1824.html>