

## **SNAPANG system variable**

1825 GstarCAD MY /KW July 26, 2021 [System Variables](#) 0 811

### **Function Description:**

The **SNAPANG** system variable is used to set the snap and grid rotation angle in current viewport relative to current UCS settings.

**Type** : Real

**Saved in** : Drawing

**Initial value** : 0.0000

In specifying a none zero value for **SNAPANG** system variable, it will not display straight line grid.

Online URL: <https://www.gstarcad.com.my/knowledge/article/snapang-system-variable-1825.html>