

## **SNAPBASE system variable**

1826 GstarCAD MY /KW July 26, 2021 [System Variables](#) 0 933

### **Function Description:**

The **SNAPBASE** system variable is used to set the snap and grid original point for the current viewport relative to current UCS settings.

**Type** : 2D point

**Saved in** : Drawing

**Initial value** : 0.0000,0.0000

Online URL: <https://www.gstarcad.com.my/knowledge/article/snapbase-system-variable-1826.html>