

SNAPBASE system variable

1826 GstarCAD MY /KW July 26, 2021 [System Variables](#) 0 922

Function Description:

The **SNAPBASE** system variable is used to set the snap and grid original point for the current viewport relative to current UCS settings.

Type : 2D point

Saved in : Drawing

Initial value : 0.0000,0.0000

Online URL: <https://www.gstarcad.com.my/knowledge/article/snapbase-system-variable-1826.html>