

SNAPSTYL system variable

1828 GstarCAD MY /KW July 26, 2021 [System Variables](#) 0 1202

Function Description:

The **SNAPSTYL** system variable is used to set grid and grid snap to rectangular or isometric for current viewport.

Type : Integer

Saved in : Drawing

Initial value : 0

Range : 0,1

System Variable Value:

0 : rectangular

1 : isometric

Online URL: <https://www.gstarcad.com.my/knowledge/article/snapstyl-system-variable-1828.html>