

SNAPTTYPE system variable

1829 GstarCAD MY /KW July 26, 2021 [System Variables](#) 0 1001

Function Description:

The **SNAPTTYPE** system variable is used to set snap type to rectangular or polar for current viewport settings.

Type : Integer

Saved in : Registry

Initial value : 0

Range : 0,1

System Variable Value:

0 : grid or standard rectangular snap

1 : polar snap, snap along grid angle increment

Use PolarSnap combined with grid track and object snap track.

Online URL: <https://www.gstarcad.com.my/knowledge/article/snapttype-system-variable-1829.html>