

## **SNAPTTYPE system variable**

1829 GstarCAD MY /KW July 26, 2021 [System Variables](#) 0 998

### **Function Description:**

The **SNAPTTYPE** system variable is used to set snap type to rectangular or polar for current viewport settings.

**Type** : Integer

**Saved in** : Registry

**Initial value** : 0

**Range** : 0,1

### **System Variable Value:**

**0** : grid or standard rectangular snap

**1** : polar snap, snap along grid angle increment

Use PolarSnap combined with grid track and object snap track.

Online URL: <https://www.gstarcad.com.my/knowledge/article/snapttype-system-variable-1829.html>