

SNAPUNIT system variable

1830 GstarCAD MY /KW July 27, 2021 [System Variables](#) 0 702

Function Description:

The **SNAPUNIT** system variable is used to set the snap space for current viewport.

Type : 2D point

Saved in : Drawing

Initial value : " 0.5000,0.5000 (Imperial) or 10.0000,10.0000 (Metric)

If specified **SNAPSTYL** to be 1, the X value of **SNAPUNIT** will be automatically adjusted to fit isometric snap.

Online URL: <https://www.gstarcad.com.my/knowledge/article/snapunit-system-variable-1830.html>