

SOLIDCHECK system variable

1831 GstarCAD MY /KW July 27, 2021 [System Variables](#) 0 694

Function Description:

The **SOLIDCHECK** system variable is used to open or close 3D solid check for current task.

Type : Integer

Saved in : Not saved

Initial value : 1

Range : 0,1

System Variable Value:

0 : close

1 : open

Online URL: <https://www.gstarcad.com.my/knowledge/article/solidcheck-system-variable-1831.html>