

## **SOLIDCHECK system variable**

1831 GstarCAD MY /KW July 27, 2021 [System Variables](#) 0 681

### **Function Description:**

The **SOLIDCHECK** system variable is used to open or close 3D solid check for current task.

**Type** : Integer

**Saved in** : Not saved

**Initial value** : 1

**Range** : 0,1

### **System Variable Value:**

**0** : close

**1** : open

Online URL: <https://www.gstarcad.com.my/knowledge/article/solidcheck-system-variable-1831.html>