

SOLIDHIST system variable

1832 GstarCAD MY /KW July 27, 2021 [System Variables](#) 0 835

Function Description:

The **SOLIDHIST** system variable is used to control whether to keep its history record of original parts for new composite solids.

Type : Integer

Saved in : Drawing

Initial value : 0

Range : 0,1

When set to be 1, all composite solids created will keep their original parts objects history record. Users could access those part objects for modifying solids.

System Variable Value:

0 : set History Record property set to be none for new solids. It will not keep history record

1 : set History Record property set to be Record for new solids. Solids will kept their original objects history record.

Online URL: <https://www.gstarcad.com.my/knowledge/article/solidhist-system-variable-1832.html>