

## **SOLIDHIST system variable**

1832 GstarCAD MY /KW July 27, 2021 [System Variables](#) 0 823

### **Function Description:**

The **SOLIDHIST** system variable is used to control whether to keep its history record of original parts for new composite solids.

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 0

**Range** : 0,1

When set to be 1, all composite solids created will keep their original parts objects history record. Users could access those part objects for modifying solids.

### **System Variable Value:**

**0** : set History Record property set to be none for new solids. It will not keep history record

**1** : set History Record property set to be Record for new solids. Solids will kept their original objects history record.

Online URL: <https://www.gstarcad.com.my/knowledge/article/solidhist-system-variable-1832.html>