

## **SORTENTS system variable**

1833 GstarCAD MY /KW July 27, 2021 [System Variables](#) 0 1085

### **Function Description:**

The **SORTENTS** system variable is used to control object sorting to support drawing order for several operations.

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 127

**Range** : 0,1,2,4,8,16,32,64

The setting is stored as a bitcode using the sum of listed system variable values.

### **System Variable Value:**

**0** : close all object sorting

**1** : sort for selected objects

**2** : sort for object snaps

**4** :disabled

**8** :disabled

**16** : sort by REGEN command

**32** :sort for plotting

Online URL: <https://www.gstarcad.com.my/knowledge/article/sortents-system-variable-1833.html>