SORTENTS system variable

1833 GstarCAD MY /KW July 27, 2021 System Variables 0 1107

Function Description:

The **SORTENTS** system variable is used to control object sorting to support drawing order for several operations.

Type: Integer Saved in: Drawing Initial value: 127

Range: 0,1,2,4,8,16,32,64

The setting is stored as a bitcode using the sum of listed system variable values.

System Variable Value:

0 : close all object sorting

1 : sort for selected objects

2 : sort for object snaps

4 :disabled

8:disabled

16: sort by REGEN command

32 :sort for plotting

Online URL: https://www.gstarcad.com.my/knowledge/article/sortents-system-variable-1833.html