

SPLFRAME system variable

1834 GstarCAD MY /KW July 27, 2021 [System Variables](#) 0 923

Function Description:

The **SPLFRAME** system variable is used to control the display of helixes and smoothed mesh objects.

Type : Integer

Saved in : Drawing

Initial value : 0

Range : 0,1

System Variable Value:

0 : do not display the control polygon for helixes

Display smoothed mesh object(if mesh objects has smoothed)

Do not display invisible edges for 3D faces or multiple faces meshes

1 : display the control polygon for helixes

Display the mesh object without smooth(even if mesh objects has smoothed)

Display edges for 3D faces or multiple faces meshes

Online URL: <https://www.gstarcad.com.my/knowledge/article/splframe-system-variable-1834.html>