

## **SPLINETYPE system variable**

1836 GstarCAD MY /KW July 27, 2021 [System Variables](#) 0 1113

### **Function Description:**

The **SPLINETYPE** system variable is used to set the curve type generated by Spline option of PEDIT command.

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 6

**Range** : 5,6

### **System Variable Value:**

**5** : quadratic B-spline

**6** : cubic B-spline

Online URL: <https://www.gstarcad.com.my/knowledge/article/splintype-system-variable-1836.html>