

SPLINETYPE system variable

1836 GstarCAD MY /KW July 27, 2021 [System Variables](#) 0 1127

Function Description:

The **SPLINETYPE** system variable is used to set the curve type generated by Spline option of PEDIT command.

Type : Integer

Saved in : Drawing

Initial value : 6

Range : 5,6

System Variable Value:

5 : quadratic B-spline

6 : cubic B-spline

Online URL: <https://www.gstarcad.com.my/knowledge/article/splintype-system-variable-1836.html>