

SSMAUTOOPEN system variable

1838 GstarCAD MY /KW July 27, 2021 [System Variables](#) 0 696

Function Description:

The **SSMAUTOOPEN** system variable is used to control the display behavior of Sheet Set Manager when opening a drawing associated with sheet sets.

Type : Integer

Saved in : User-settings

Initial value : 1

Range : 0,1

System Variable Value:

0 : do not open its sheet set automatically

1 :open its sheet set automatically

Online URL: <https://www.gstarcad.com.my/knowledge/article/ssmautoopen-system-variable-1838.html>