

## **SSMAUTOOPEN system variable**

1838 GstarCAD MY /KW July 27, 2021 [System Variables](#) 0 705

### **Function Description:**

The **SSMAUTOOPEN** system variable is used to control the display behavior of Sheet Set Manager when opening a drawing associated with sheet sets.

**Type** : Integer

**Saved in** : User-settings

**Initial value** : 1

**Range** : 0,1

### **System Variable Value:**

**0** : do not open its sheet set automatically

**1** :open its sheet set automatically

Online URL: <https://www.gstarcad.com.my/knowledge/article/ssmautoopen-system-variable-1838.html>