

## **STATUSBAR system variable**

1844 GstarCAD MY /KW July 27, 2021 [System Variables](#) 0 666

### **Function Description:**

The **STATUSBAR** system variable is used to control the display of status bar.

**Type** : Integer

**Saved in** : Registry

**Initial value** : 1

**Range** : 0,1

System Variable Value:

**0** : hide status bar

**1** : display status bar

Online URL: <https://www.gstarcad.com.my/knowledge/article/statusbar-system-variable-1844.html>