

SURFACEASSOCIATIVITYDRAG system variable

1847 GstarCAD MY /KW July 27, 2021 [System Variables](#) 0 709

Function Description:

The **SURFACEASSOCIATIVITYDRAG** system variable is used to set the dragging preview behavior of associated surfaces.

Type : Parameter

Saved in : Drawing

Initial value : 1

Range : 0,1,2

This system variable could control the surface preview method of surfaces or all associated surfaces when dragging a selected surface. Disabling preview could enhance performance.

System Variable Value:

0 : do not display preview. It will refresh after dragging.

1 : only preview the first associated surface dragging. All other associated surface will not move after dragging.

2 : preview all associated surfaces dragging.

Online URL:

<https://www.gstarcad.com.my/knowledge/article/surfaceassociativitydrag-system-variable-1847.html>