

## **SURFACEAUTOTRIM system variable**

1848 GstarCAD MY /KW July 27, 2021 [System Variables](#) 0 746

### **Function Description:**

The **SURFACEAUTOTRIM** system variable is used to set whether to auto trim surface when geometry projecting to surface.

**Type** : Integer

**Saved in** : Registry

**Initial value** : 0

**Range** : 0,1

### **System Variable Value:**

**0** : do not trim surface when geometry projecting to surface.

**1** : auto trim surface when geometry projecting to surface

Online URL:

<https://www.gstarcad.com.my/knowledge/article/surfaceautotrim-system-variable-1848.html>