

SURFACEAUTOTRIM system variable

1848 GstarCAD MY /KW July 27, 2021 [System Variables](#) 0 748

Function Description:

The **SURFACEAUTOTRIM** system variable is used to set whether to auto trim surface when geometry projecting to surface.

Type : Integer

Saved in : Registry

Initial value : 0

Range : 0,1

System Variable Value:

0 : do not trim surface when geometry projecting to surface.

1 : auto trim surface when geometry projecting to surface

Online URL:

<https://www.gstarcad.com.my/knowledge/article/surfaceautotrim-system-variable-1848.html>