

SURFTAB1 system variable

1849 GstarCAD MY /KW July 27, 2021 [System Variables](#) 0 910

Function Description:

The **SURFTAB1** system variable is used to set how many tables will be generated by RULESURF and TABSURF commands.

Type : Integer

Saved in : Drawing

Initial value : 6

It also set the mesh density in M direction for **REVSURF** command.

Online URL: <https://www.gstarcad.com.my/knowledge/article/surftab1-system-variable-1849.html>