

SURFTYPE system variable

1851 GstarCAD MY /KW July 27, 2021 [System Variables](#) 0 774

Function Description:

The **SURFTYPE** system variable is used to control the type of surface-fitting to be performed by the Smooth option of PEDIT command.

Type : Integer

Saved in : Drawing

Initial value : 6

Range : 5,6,8

System Variable Value:

5 : quadratic B-spline surface

6 : cubic B-spline surface

8 : bezier surface

Online URL: <https://www.gstarcad.com.my/knowledge/article/surftype-system-variable-1851.html>