

## **SURFTYPE system variable**

1851 GstarCAD MY /KW July 27, 2021 [System Variables](#) 0 775

### **Function Description:**

The **SURFTYPE** system variable is used to control the type of surface-fitting to be performed by the Smooth option of PEDIT command.

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 6

**Range** : 5,6,8

### **System Variable Value:**

**5** : quadratic B-spline surface

**6** : cubic B-spline surface

**8** : bezier surface

Online URL: <https://www.gstarcad.com.my/knowledge/article/surftype-system-variable-1851.html>