

## **SURFU system variable**

1852 GstarCAD MY /KW July 27, 2021 [System Variables](#) 0 824

### **Function Description:**

The **SURFU** system variable is used to set the surface density in M direction for PEDIT Smooth option and the U isolines density on surface objects.

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 6

**Range** : 0 ~ 200

Meshes are always created with the smallest density of 2.

Online URL: <https://www.gstarcad.com.my/knowledge/article/surfu-system-variable-1852.html>