

SURFV system variable

1853 GstarCAD MY /KW July 27, 2021 [System Variables](#) 0 890

Function Description:

The **SURFV** system variable is used to set the surface density in N direction for PEDIT Smooth option and the V isolines density on surface objects.

Type : Integer

Saved in : Drawing

Initial value : 6

Range : 0 ~ 200

Meshes are always created with the smallest density of 2.

Online URL: <https://www.gstarcad.com.my/knowledge/article/surfv-system-variable-1853.html>