

## **SYSCODEPAGE system variable**

1854 GstarCAD MY /KW July 27, 2021 [System Variables](#) 0 897

### **Function Description:**

The **SYSCODEPAGE** system variable is used to indicate the system code page that determined by operation system.

(Read-Only)

**Type** : Strings

**Saved in** : Not saved

**Initial value** : Unknown

Online URL: <https://www.gstarcad.com.my/knowledge/article/syscodepage-system-variable-1854.html>