

TABMODE system variable

1857 GstarCAD MY /KW July 27, 2021 [System Variables](#) 0 960

Function Description:

The **TABMODE** system variable is used to control the usage of digital tablet input device.

Type : Integer

Saved in : Not saved

Initial value : 0

Range : 0,1

System Variable Value:

0 : close

1 : open

Online URL: <https://www.gstarcad.com.my/knowledge/article/tabmode-system-variable-1857.html>