

## **TDUSRTIMER system variable**

1864 GstarCAD MY /KW July 27, 2021 [System Variables](#) 0 1024

### **Function Description:**

The **TDUSRTIMER** system variable is used to store the user-elapsed timer.  
(Read-Only)

**Type** : Real

**Saved in** : Drawing

**Initial value** : Unknown

Online URL: <https://www.gstarcad.com.my/knowledge/article/tdusrtimer-system-variable-1864.html>