

TDUSRTIMER system variable

1864 GstarCAD MY /KW July 27, 2021 [System Variables](#) 0 1015

Function Description:

The **TDUSRTIMER** system variable is used to store the user-elapsed timer.
(Read-Only)

Type : Real

Saved in : Drawing

Initial value : Unknown

Online URL: <https://www.gstarcad.com.my/knowledge/article/tdusrtimer-system-variable-1864.html>