

TDUUPDATE system variabl

1865 GstarCAD MY /KW July 27, 2021 [System Variables](#) 0 612

Function Description:

The **TDUUPDATE** system variable is used to store the last update or saved world standard time and date.

(Read-Only)

Type : Integer

Saved in : Drawing

Initial value : Unknown

Online URL: <https://www.gstarcad.com.my/knowledge/article/tduupdate-system-variabl-1865.html>