

## **TDUUPDATE system variabl**

1865 GstarCAD MY /KW July 27, 2021 [System Variables](#) 0 624

### **Function Description:**

The **TDUUPDATE** system variable is used to store the last update or saved world standard time and date.

(Read-Only)

**Type** : Integer

**Saved in** : Drawing

**Initial value** : Unknown

Online URL: <https://www.gstarcad.com.my/knowledge/article/tduupdate-system-variabl-1865.html>