

TEMPOVERRIDES system variable

1866 GstarCAD MY /KW July 27, 2021 [System Variables](#) 0 1119

Function Description:

The **TEMPOVERRIDES** system variable is used to turn temporarily override keys on or off for drawing.

Type : Integer

Saved in : Registry

Initial value : 1

Range : 0,1

Users could temporarily open or close a certain drawing supplementary tool set in Drafting settings dialog box by pressing temporarily override keys, such as, ortho mode, object snap or polar mode.

System Variable Value:

0 : off

1 : on

Online URL: <https://www.gstarcad.com.my/knowledge/article/tempoverrides-system-variable-1866.html>