

## **TEMPOVERRIDES system variable**

1866 GstarCAD MY /KW July 27, 2021 [System Variables](#) 0 1091

### **Function Description:**

The **TEMPOVERRIDES** system variable is used to turn temporarily override keys on or off for drawing.

**Type** : Integer

**Saved in** : Registry

**Initial value** : 1

**Range** : 0,1

Users could temporarily open or close a certain drawing supplementary tool set in Drafting settings dialog box by pressing temporarily override keys, such as, ortho mode, object snap or polar mode.

### **System Variable Value:**

**0** : off

**1** : on

Online URL: <https://www.gstarcad.com.my/knowledge/article/tempoverrides-system-variable-1866.html>