

## **TEXTFILL system variable**

1870 GstarCAD MY /KW July 27, 2021 [System Variables](#) 0 1018

### **Function Description:**

The **TEXTFILL** system variable is used to control whether to fill TrueType fonts for plotting.

**Type** : Integer

**Saved in** : Not saved

**Initial value** : 1

**Range** : 0,1

### **System Variable Value:**

**0** : display text in profile

**1** : display text as filled images

Online URL: <https://www.gstarcad.com.my/knowledge/article/textfill-system-variable-1870.html>