

TEXTQLTY system variable

1872 GstarCAD MY /KW July 27, 2021 [System Variables](#) 0 1049

Function Description:

The **TEXTQLTY** system variable is used to set the resolutions of true type text when plotting and rendering.

Type : Integer

Saved in : Not saved

Initial value : 50

Range : 0 ~ 100

A smaller value will decrease text smoothness, but it could increase speed.

A larger value could increase text smoothness, but it could decrease speed.

Online URL: <https://www.gstarcad.com.my/knowledge/article/textqlty-system-variable-1872.html>