

## **TEXTSTYLE system variable**

1874 GstarCAD MY /KW July 27, 2021 [System Variables](#) 0 1147

### **Function Description:**

The **TEXTSTYLE** system variable is used to set the name for current text style.

**Type** : Strings

**Saved in** : Drawing

**Initial value** : Standard

Online URL: <https://www.gstarcad.com.my/knowledge/article/textstyle-system-variable-1874.html>