

## **THICKNESS system variable**

1875 GstarCAD MY /KW July 27, 2021 [System Variables](#) 0 752

### **Function Description:**

The **THICKNESS** system variable is used to set default 3D thickness property when creating 2D geometric objects.

**Type** : Real

**Saved in** : Drawing

**Initial value** : 0.0000

**Note:** when users want to add 3D thickness to new created objects by **RECTANG** and **TEXT** commands, there is one exception, the 3D thickness property will use Property palettes or separate settings by **CHPROP** command. The single text must be SHX font to accept 3D thickness.

Online URL: <https://www.gstarcad.com.my/knowledge/article/thickness-system-variable-1875.html>