

THICKNESS system variable

1875 GstarCAD MY /KW July 27, 2021 [System Variables](#) 0 735

Function Description:

The **THICKNESS** system variable is used to set default 3D thickness property when creating 2D geometric objects.

Type : Real

Saved in : Drawing

Initial value : 0.0000

Note: when users want to add 3D thickness to new created objects by **RECTANG** and **TEXT** commands, there is one exception, the 3D thickness property will use Property palettes or separate settings by **CHPROP** command. The single text must be SHX font to accept 3D thickness.

Online URL: <https://www.gstarcad.com.my/knowledge/article/thickness-system-variable-1875.html>