

## **TILEMODE system variable**

1877 GstarCAD MY /KW July 27, 2021 [System Variables](#) 0 955

### **Function Description:**

The **TILEMODE** system variable is used to control whether it is allowed to access paper space.

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 1

**Range** : 0,1

### **System Variable Value:**

**0** : allow to access paper space and set the recently accessed layout to be current

**1** : forbid to access paper space and set the model space to be current

Online URL: <https://www.gstarcad.com.my/knowledge/article/tilemode-system-variable-1877.html>