

TRACKPATH system variable

1883 GstarCAD MY /KW July 28, 2021 [System Variables](#) 0 844

Function Description:

The **TRACKPATH** system variable is used to control the display of alignment path for polar track and object snap track.

Type : Integer

Saved in : Registry

Initial value : 0

Range : 0,1,2,3

System Variable Value:

0 :display polar track and object snap track path in full screen

1 : display polar track path in full screen ;only display the object snap track path from alignment point to cursor location starting point

2 : display object snap track path; do not display polar track path

3 : do not display polar track path; only display the object snap track path from alignment point to cursor location starting point

Online URL: <https://www.gstarcad.com.my/knowledge/article/trackpath-system-variable-1883.html>