

TRAYTIMEOUT system variable

1885 GstarCAD MY /KW July 28, 2021 [System Variables](#) 0 764

Function Description:

The **TRAYTIMEOUT** system variable is used to control how long the service notification displays by second.

Type : Integer

Saved in : Registry

Initial value : 0

Range : 0 ~ 10

Online URL: <https://www.gstarcad.com.my/knowledge/article/traytimeout-system-variable-1885.html>