

## **TREEMAX system variable**

1887 GstarCAD MY /KW July 28, 2021 [System Variables](#) 0 772

### **Function Description:**

The **TREEMAX** system variable is used to limit regenerating drawing memory by limiting the number of nodes in the spatial index (oct-tree).

**Type** : Integer

**Saved in** : Registry

**Initial value** : 10000000

Online URL: <https://www.gstarcad.com.my/knowledge/article/treemax-system-variable-1887.html>